



Fabric Planter Setup Guide

Dimensions: 93 cm W x 33 cm L x 35 cm H

Capacity: 107.5 L / 235 gal



Designed for use with
AutoPot Tray2Grow

- ⇒ Porous planter walls for vigorous, healthy growth
- ⇒ Fabric allows for air-pruning & helps eliminate root circling
- ⇒ Increased oxygen exchange stimulates root zone

www.autopot.co.uk

T: +44 (0)127 653 4900

E: mail@autopot.co.uk



Contents


4x Short poles (frame ends) 8x Elbow joints
4x Medium poles (frame uprights) 1x Planter fabric
4x Long poles (frame sides)

Step By Step Setup

Fully collapsible and machine washable!

Cleaning Instructions: Once your growing season is over your planter can easily be disassembled for cleaning and/or storage. The planter fabric should be machine washed on a cool cycle. Once washed the planter fabric should be air-dried. **DO NOT TUMBLE DRY.** Once dry simply brush off any debris before reusing or storing.


1



Lay out and check your planter components.

Familiarise yourself with the different pole lengths.


2

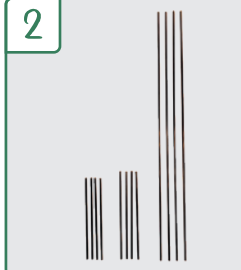

You have:

- 4x Short poles for frame ends
- 4x Medium poles for frame uprights
- 4x Long poles for frame sides

3

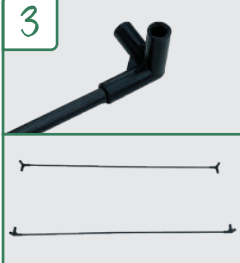


First create the base of the planter frame.

Take two long poles and four elbow connectors.

Attach an elbow to both ends of each long pole.


4

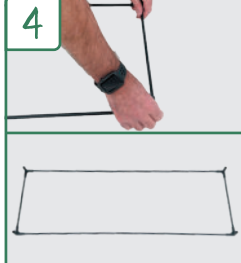

Connect the long poles from Step 3 using two short poles.

This forms the base of the planter frame.

5

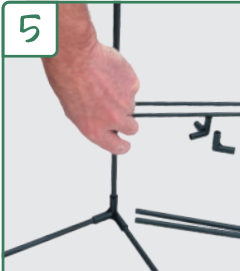

You should now have four open elbow sockets all pointing upwards.

Insert medium poles into all four of the open elbow sockets so that your uprights are vertical.

6



Place the frame inside the planter fabric with the exposed ends of the uprights pointing up.

Attach an elbow connector to the top of each exposed upright.

7



Take the remaining poles and thread into sleeves in the planter fabric.

8



Insert the ends of all these poles into the elbows on the uprights.

Tension will increase as you complete this step.

Your fabric planter is complete.